


# Remote controller

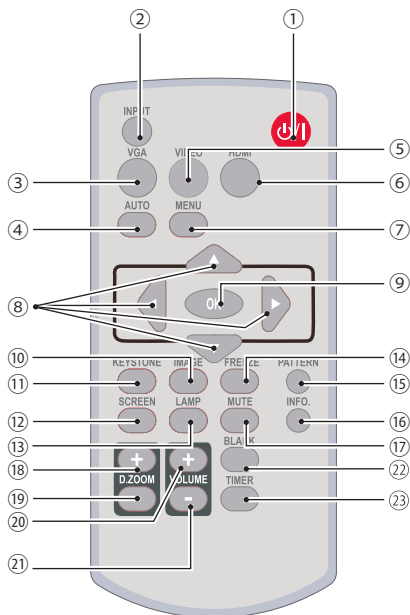

## 1 POWER

Power on or off your projector .

## 2 INPUT

Open or close the INPUT menu .

## 3 VGA

Select VGA input source .

## 4 AUTO

Enter auto adjustment mode .

## 5 VIDEO

Select VIDEO input source .

## 6 HDMI

Select HDMI 1/HDMI 2 input source.

## 7 MENU

Open or close the OSD menu .

## 8 Arrow ▲▼◀▶

- Select items or adjust data in the OSD menu .
- Select display area in digital zoom+ mode .

## 9 OK

Enter the OSD menu or select options in it .

## 10 IMAGE

Select image mode .

## 11 KEYSTONE

Keystone calibration .

## 12 SCREEN

Enter the screen size adjustment menu.

## 13 LAMP

Select LAMP mode.

## 14 FREEZE

Freeze projected images.

## 15 PATTERN

Select built-in test pattern of your projector.

## 16 INFO.

Display current status info. of your projector .

## 17 MUTE

Turn off the sound Temporarily.

## 18 D.ZOOM +

Zoom in projected image .

## 19 D.ZOOM -

Zoom out projected image .

## 20 VOLUME +

Increase volume.

## 21 VOLUME -

Decrease volume .

## 22 BLANK

Dark out screen images temporarily.

## 23 TIMER

Enable the timer function .



PATTERN button on the remote controller is invalid when you choose USB display, Memory viewer and Network as input signal.