


Top control panel and indicators

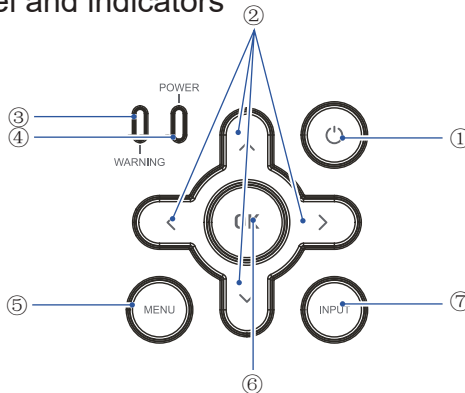

① **POWER**

Open or close the projector.

② **Arrow ▲ ▼ ◀ ▶ /UP/DOWN/VOL-/VOL+**

- Select items or adjust the data in the OSD menu.
- Shift the image in the "Digital zoom +/-" mode.
- Adjust the volume.

③ **WARNING indicator**

- The indicator is flashing red, when the internal temperature of the projector exceeds the operating range.

④ **POWER indicator**

- The POWER indicator turns steady red, when the projector is in standby mode,
- The POWER indicator turns steady green, during the working time.
- The POWER indicator is flashing green, when the projector is in power management mode
- The POWER indicator is flashing red, when the projector is in cooling mode.
- The POWER indicator turns steady green yellow, when the projector power is abnormal.

⑤ **MENU**

Open or close the OSD menu.

⑥ **OK**

- Enter the OSD menu
- Select options in the OSD menu .

⑦ **INPUT**

Open or close the INPUT menu.